

## Spare digits

AV041 - AV042



Spare digits for manual numeric indicators. The digits go from 0 to 9, and also include the symbols “+” and “-”.

Any reproduction, either partial or total, including the transmission of the data set out in this document shall be authorized in writing and in advance by Mondo.  
Mondo has the right to modify either specifications and products at any time, without notice. This document is not legally binding as a contract.

Numbers are easily changed with the flip of the corresponding lever.

## VARIANTS

---

### Spare digits Red AV041

Spare Part for:

Manual lap counter	AC070
Wind speed / Pole vault standard position manual indicator board	AV081
Eight Digits Manual Indicator Board	AV040

### Spare digits Black AV042

Spare Part for:

Manual lap counter	AC070
Wind speed / Pole vault standard position manual indicator board	AV081
Eight Digits Manual Indicator Board	AV040

---

Any reproduction, either partial or total, including the transmission of the data set out in this document shall be authorized in writing and in advance by Mondo.  
Mondo has the right to modify either specifications and products at any time, without notice. This document is not legally binding as a contract.